

4.Painting RFI

4.1. RFI Coat

4.1.1.RFI Coat Add

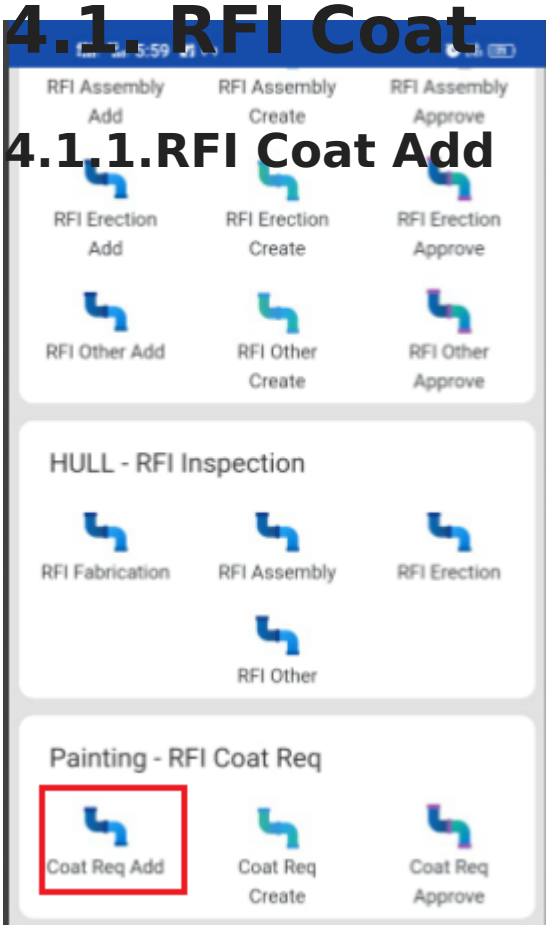


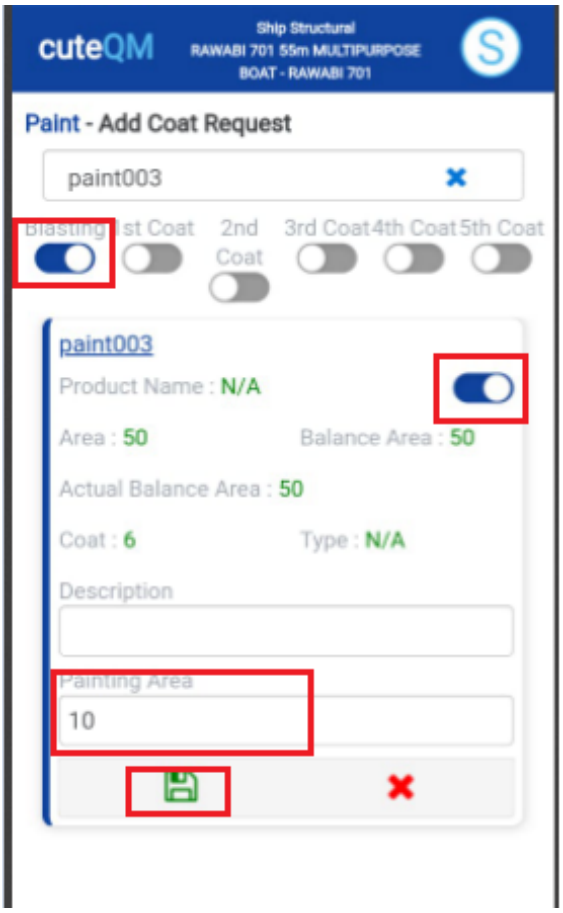


1. Click **RFI Coat Add** menu .This menu helps to add the painting coat work for the RFI coat request.
2. Select Painting name in the dropdown list.
3. Select the appropriate painting type toggle button (Blasting,coat1,coat2....)
4. Enter **description**.
5. Enter **painting area**
6. Click  **Save** icon.


Painting coat RFI request added successfully.

3.1.2.RFI Coat Create

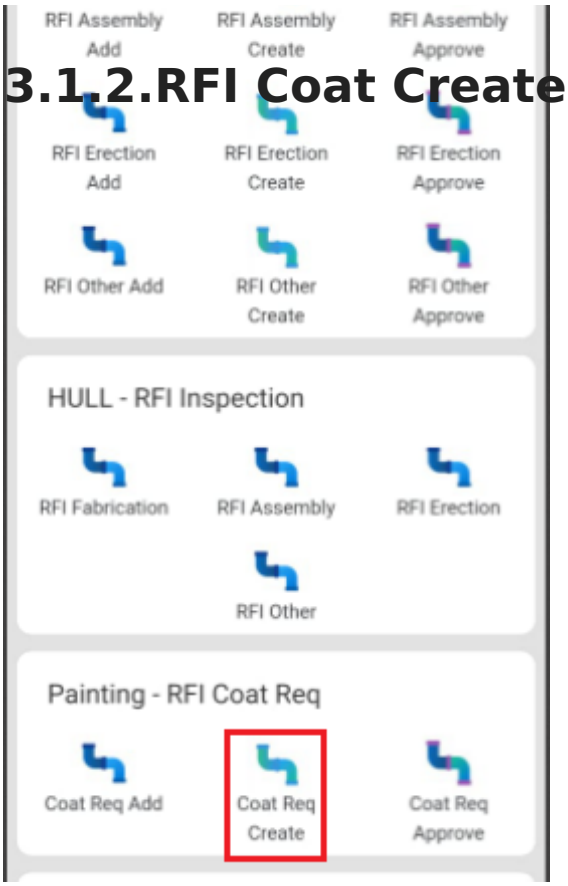

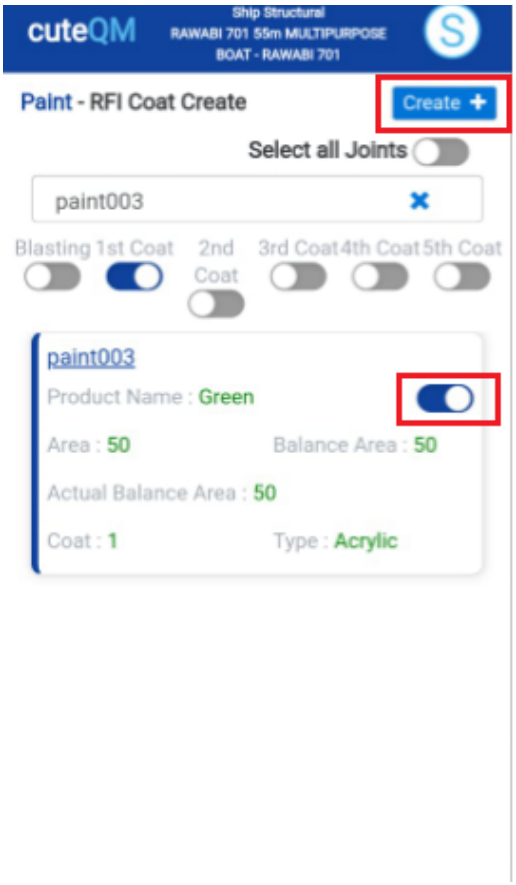


1. Click **RFI Coat create** menu.This menu helps to create RFI requests from added painting names.
2. Select the painting name from dropdown list
3. Select the painting tyep toggle(Defaultly blasting selected)
4. Select the painting name
5. Click **Create** button at the top
6. After create button clicked,a popup will open to key in **inspection date,subcontractor and description.**

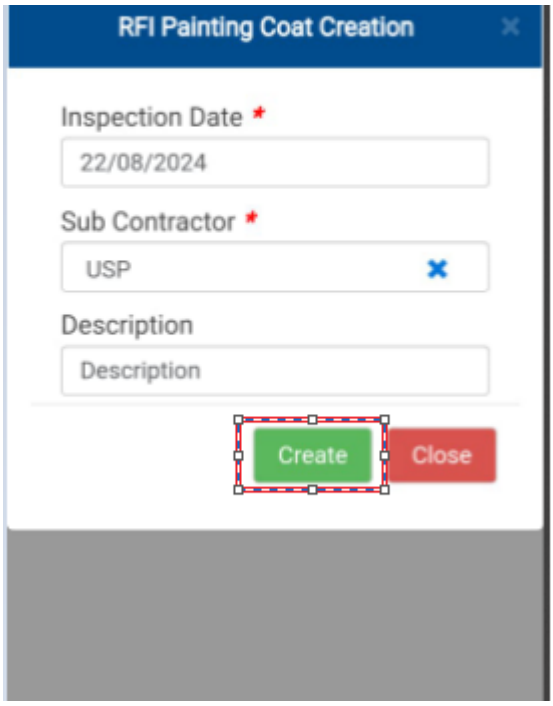


7.Click **Create** button.

RFI Coat request created successfully.

3.1.3.RFI Coat Approve

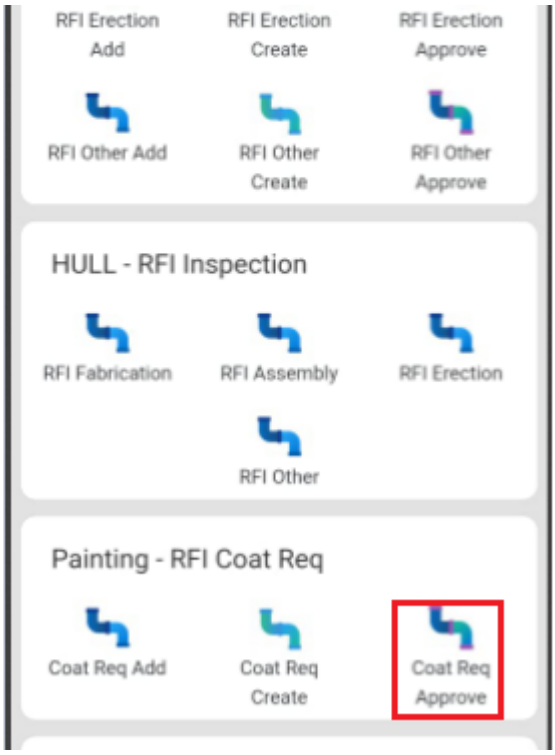

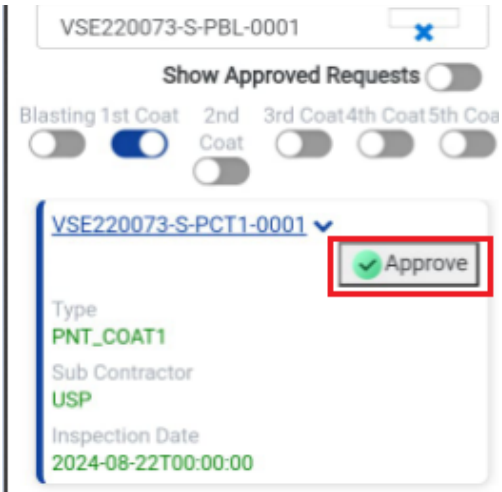


1. Click **RFI Coat approve** menu
2. Select the RFI request no from dropdown list
3. Select the paint type toggle(Defaultly blasting selected)
4. Click **Approve** button.


RFI Coat request approved successfully.

3.1.4.RFI Coat Inspection

1. Click **RFI Coat** menu in Inspection.
2.

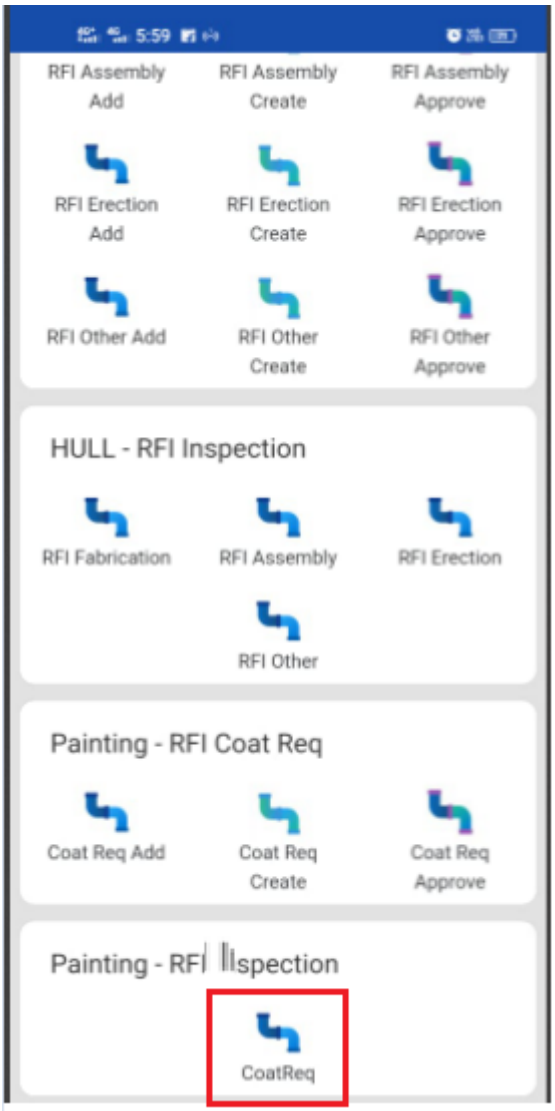

1. Click ⊞ button .It will redirected to new page

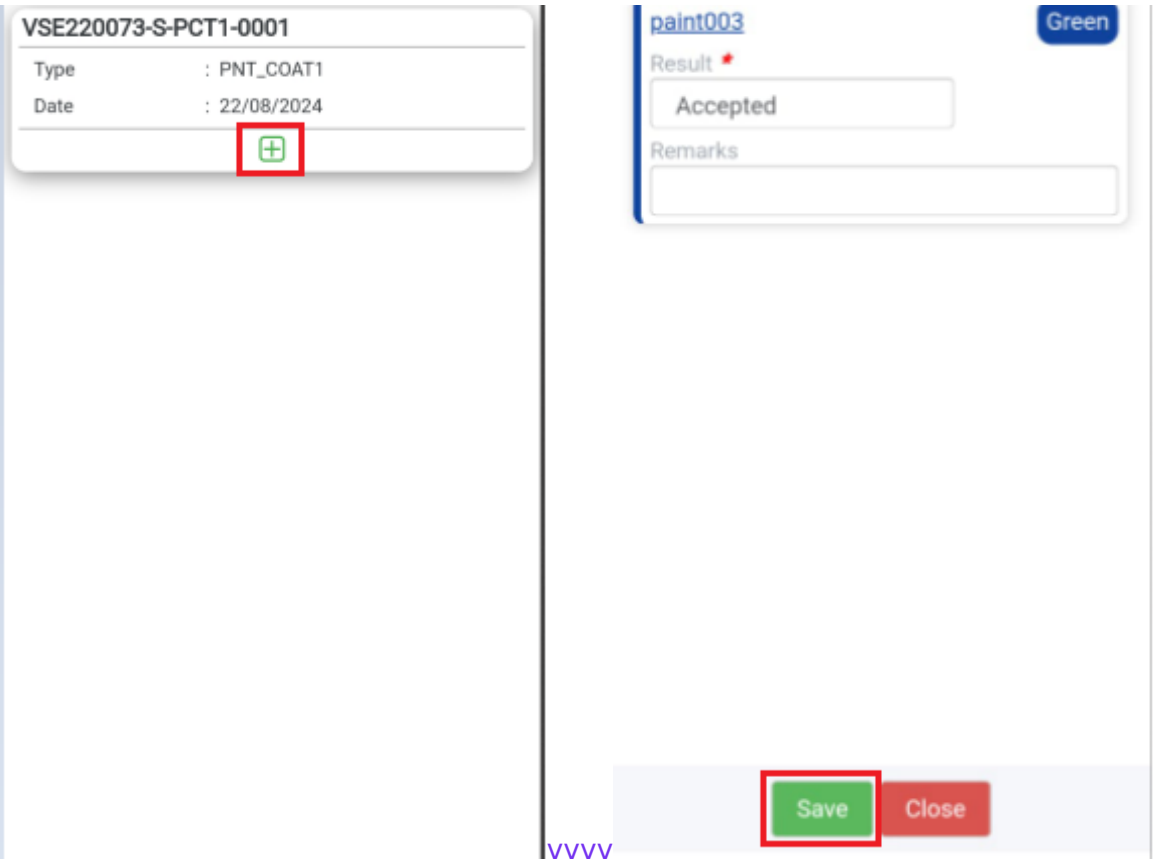

vvvv

1. Result will be defaultly accepted,If need to reject,you can change the dropdown as Reject
2. Enter **remarks**
3. Click **Save** button.

RFI Coat inspection approved successfully.

Revision #5
Created 22 August 2024 12:26:06 by Shybin
Updated 10 December 2024 05:50:10 by Shybin