


# 4.Painting RFI

## 4.1. RFI Coat


### 4.1.1. RFI Coat Add

The image shows two screenshots from a mobile application. The left screenshot displays a menu with various RFI options. The 'Coat Req Add' option is highlighted with a red box. The right screenshot shows the 'Paint - Add Coat Request' form. The 'paint003' dropdown is selected. The 'Blasting' toggle is turned on, and the '1st Coat' toggle is also turned on. The 'Painting Area' field contains the value '10'. The 'Save' icon is highlighted with a red box.

1. Click **RFI Coat Add** menu .This menu helps to add the painting coat work for the RFI coat request.
2. Select Painting name in the dropdown list.
3. Select the appropriate painting type toggle button (Blasting,coat1,coat2....)
4. Enter **description**.
5. Enter **painting area**
6. Click  **Save** icon.

**Painting coat RFI request added successfully.**

### 3.1.2.RFI Coat Create

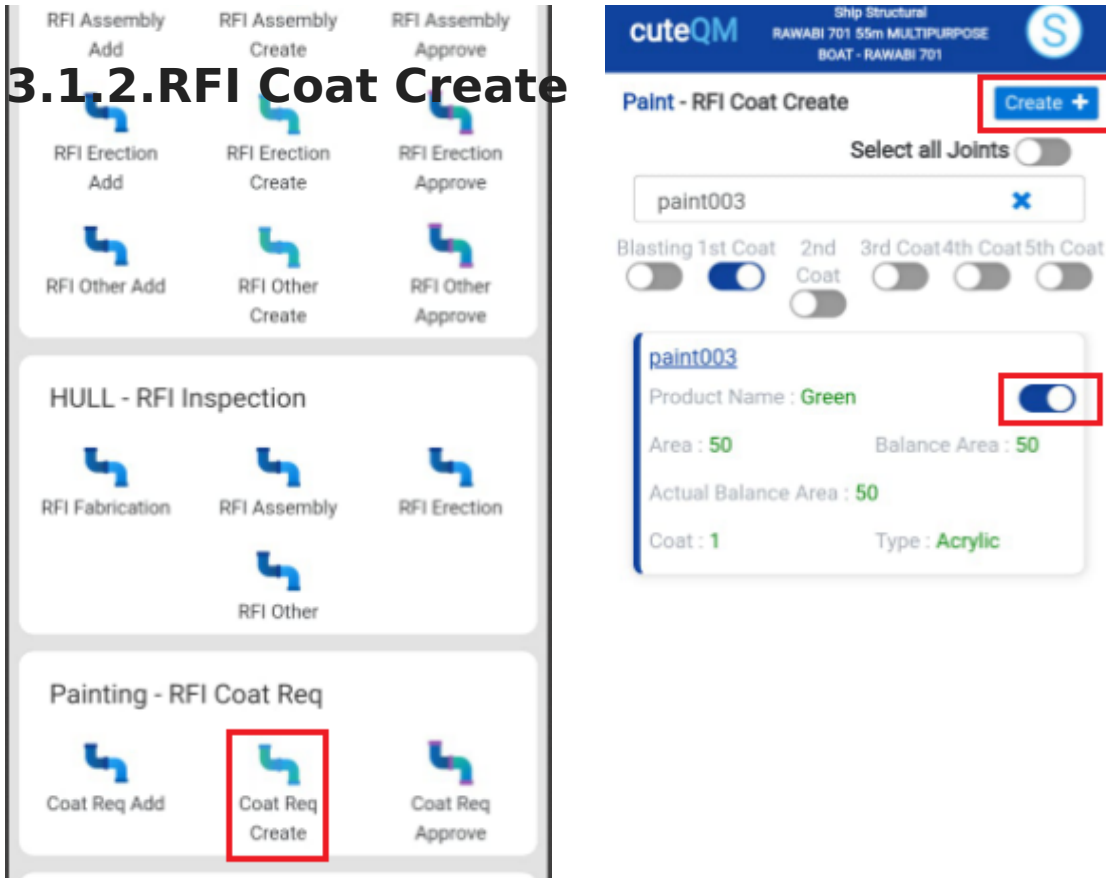

1. Click **RFI Coat create** menu.This menu helps to create RFI requests from added painting names.
2. Select the painting name from dropdown list
3. Select the painting tyep toggle(Defaultly blasting selected)
4. Select the painting name
5. Click **Create** button at the top
6. After create button clicked,a popup will open to key in **inspection date,subcontractor and description.**

RFI Painting Coat Creation

Inspection Date \*  
22/08/2024

Sub Contractor \*  
USP


Description  
Description

Create Close

7. Click **Create** button.

**RFI Coat request created successfully.**

### **3.1.3. RFI Coat Approve**

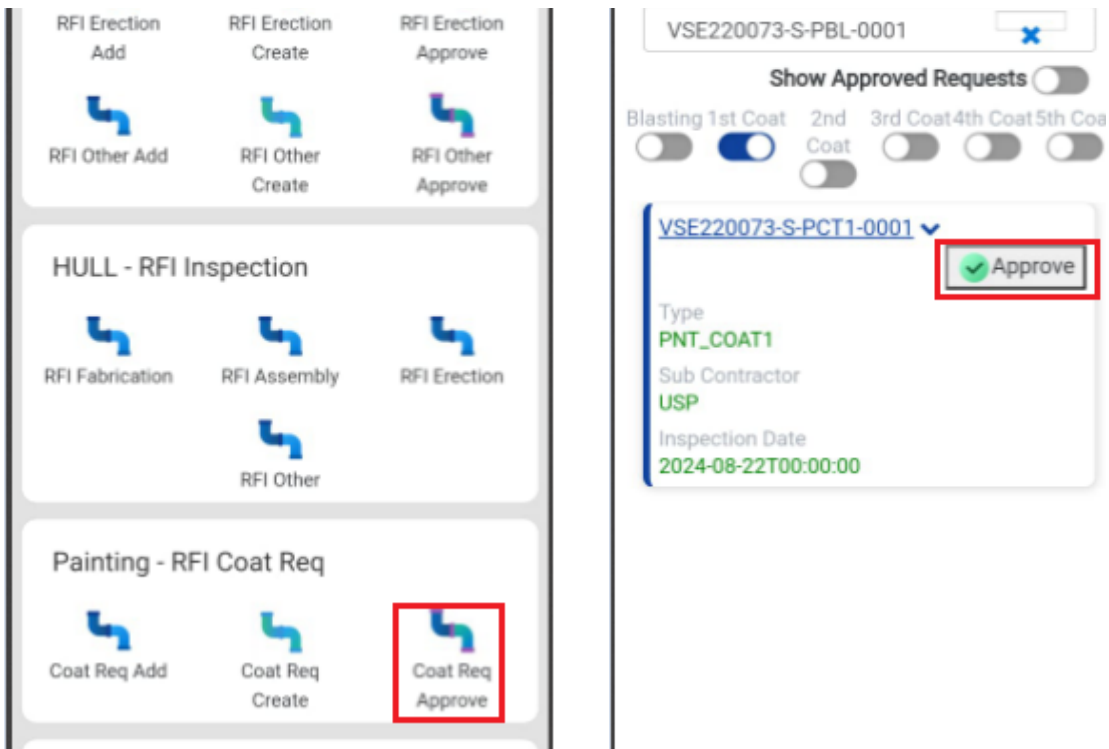


1. Click **RFI Coat approve** menu
2. Select the RFI request no from dropdown list
3. Select the paint type toggle(Defaultly blasting selected)
4. Click **Approve** button.

**RFI Coat request approved successfully.**

### **3.1.4.RFI Coat Inspection**

1. Click **RFI Coat** menu in Inspection.
- 2.

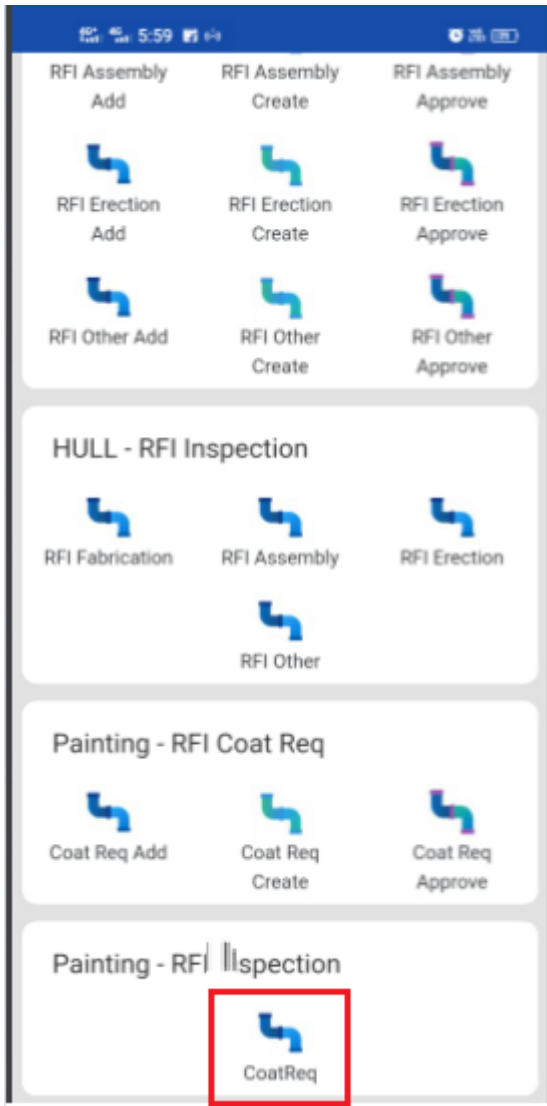

1. Click  button .It will redirected to new page

VSE220073-S-PCT1-0001

Type : PNT\_COAT1

Date : 22/08/2024

paint003 Green

Result \*  
Accepted

Remarks

Save Close

1. Result will be defaultly accepted,If need to reject,you can change the dropdown as Reject
2. Enter **remarks**
3. Click **Save** button.

**RFI Coat inspection approved successfully.**

---

Revision #5

Created 22 August 2024 12:26:06 by Shybin

Updated 10 December 2024 05:50:10 by Shybin